

A33 Battery Replacement Instructions



REMOVE KICKSTAND



1. USE FLATHEAD SCREWDRIVER TO PRY KICKSTAND ATTACHMENT LEG FROM HOLE



2. REPEAT ON OTHER SIDE



REMOVE BATTERY DOOR SCREWS



3. USE A TORX HEAD (size T-6) SCREWDRIVER TO REMOVE 6 SCREWS



4. USE FLATHEAD SCREWDRIVER TO PRY LID FROM HOUSING. THE DOOR IS AFFIXED TO THE HOUSING WITH ADHESIVE TAPE.



5. REMOVE DOOR AS SHOWN



REMOVE BATTERY AND REPLACE WITH NEW BATTERY



6. REMOVE BATTERY FROM HOUSING



7. UNPLUG HOUSING CONNECTOR FROM BATTERY CONNECTOR




8. REPLACE WITH NEW BATTERY AND PLUG BATTERY CONNECTOR WITH HOUSING CONNECTOR



BATTERY COVER INSTALLATION



9. RE-INSTALL BATTERY COVER

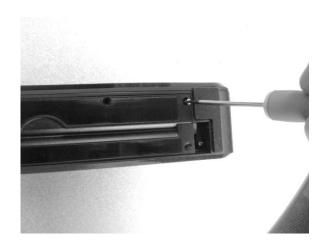

10. RE-INSTALL SCREWS (6 PLACES)



11. RE-INSTALL KICKSTAND. SNAP BOTH ENDS INTO SPEAKER HOUSING.



BATTERY COVER INSTALLATION



12. COMPLETED BATTERY REPLACEMENT